

QUICK REFERENCE

HYDRAULIC SYSTEM MAINTENANCE & TROUBLESHOOTING

CHECKLIST

Inspect quick-disconnect couplings and coupling plugs for leaks or damage.

Repair or Replace

Check internal and external hoses for wear and damage.

Replace

Look for hydraulic leaks at the fittings, Orings, gaskets and shaft seals. Retorque, repair or replace

Ensure fluid filler cap is in proper operating condition.

Replace

Verify that indicator lights are operating.

Repair or replace

Check that the cooling fan is functioning correctly.

Clean, repair or replace

Inspect the condition of fluid using a lab or portable monitor.

Filter and dehumidify as necessary

- Replace fluid filters regularly.
- Replace air filter/desiccant element regularly.
- Using the OEM maintenance manual, ensure the hydraulic pump(s) performance.
- Inspect reservoir fluid level when all cylinders are retracted at operating temperature.

Fill if needed

- Check system pressure relief valve settings, referencing OEM maintenance manual.
- Look at the reservoir's interior for any visible objects or silt buildup.
- Drain, clean and refill with new filtered fluid

Run system to purge any entrapped air. Then, circulate at varying flows and pressures.

